



Waveform Generator

Moku:Go User Manual

The Moku:Go Waveform Generator is designed to generate common signals with high accuracy and configurability across two independent output channels. The outputs are precisely adjustable for frequency, phase, and amplitude. They may be modulated with a variety of internally generated or external signals and triggered from flexible, programmable triggers.





Table of contents

User Interface	4
Main Menu	5
Output Configuration	6
Enable / Disable Outputs	6
Waveform types	6
Sine Wave	6
Square Wave	7
Ramp Wave	7
Pulse Wave	8
Noise	8
DC wave	9
Modulation types	10
Amplitude modulation	10
Frequency modulation	11
Phase modulation	11
Pulse Width modulation	12
Triggered modulation modes	13
Power Supply	15
Instrument Reference	16
Waveform Types	16
Sine Wave	16
Square Wave	16
Ramp Wave	16
Pulse Wave	16
Noise	16
DC	16
Waveform Parameters	17
Amplitude	17
Frequency	17
Offset	17
Phase	17
Symmetry	17
Pulse Width	17
Edge Time	17
Duty Cycle	18
DC Level	18
Modulation Types and Trigger Modes	18
Modulation Sources	18
Trigger Sources	18
Amplitude Modulation	19
Frequency Modulation	19
Phase Modulation	19
Pulse Width Modulation	19
Burst Mode	19
Sweep Mode	19




Ensure Moku:Go is fully updated. For the latest information:

www.liquidinstruments.com




User Interface

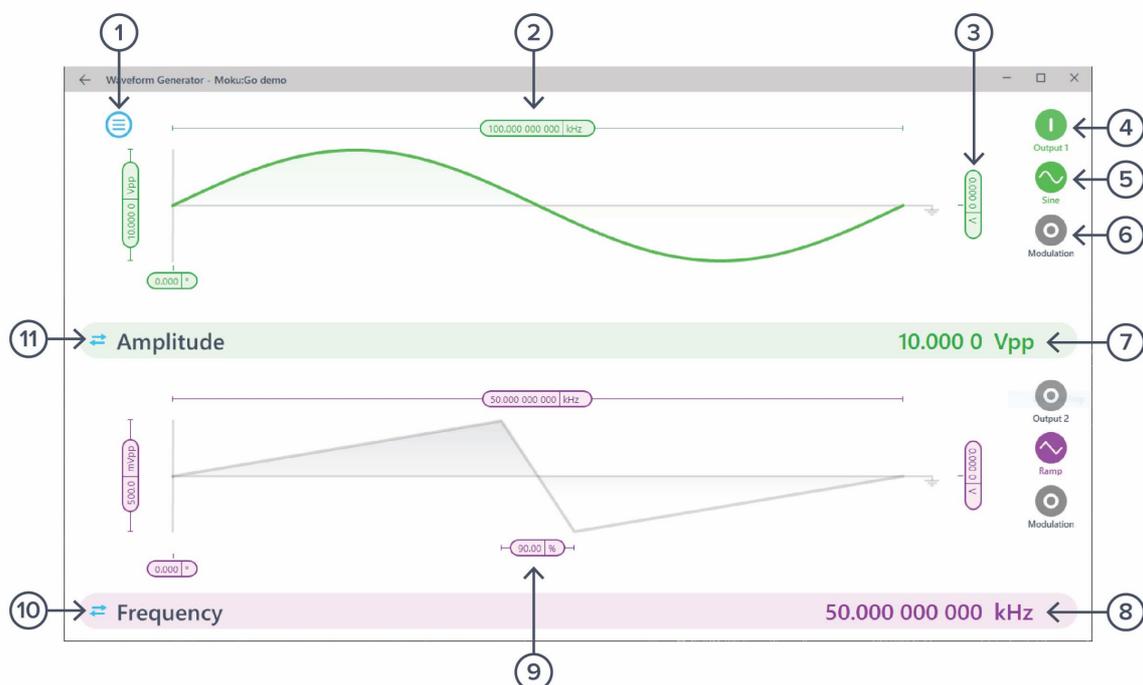

ID	Description	ID	Description
1	Main menu	7	Configure displayed parameter (Out 1)
2	Configure frequency / period	8	Configure displayed parameter (Out 2)
3	Configure waveform offset	9	Configure ramp symmetry
4	Enable / disable output	10	Switch parameter representation
5	Waveform shape	11	Switch parameter representation
6	Configure modulation		


The cross-channel actions [Sync phase](#) and [Copy settings](#) can be accessed by right clicking (secondary clicking) menu on the main user interface. [Sync phase](#) resets all waveforms, aligning the phase across channels. [Copy settings](#) duplicates the settings from one channel to another.

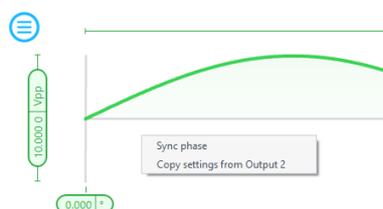



Main Menu

To access the **main menu**, press  the icon in the top-left corner.

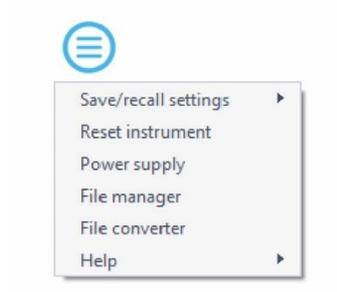

This menu provides the following options:

Options	Shortcuts	Description
My devices		Return to device selection.
<ul style="list-style-type: none">• Switch instruments		Switch to another instrument.
<ul style="list-style-type: none">• Save/recall settings:		
<ul style="list-style-type: none">• Save instrument state	Ctrl/Cmd+S	Save the current instrument settings.
Load instrument state	Ctrl/Cmd+O	Load the last saved instrument settings.
Show current state		Show the current instrument settings.
Reset instrument	Ctrl/Cmd+R	Reset the instrument to its default state.
Power supply		Access the Power Supply control window.*
File manager		Open the File Manager tool.**
<ul style="list-style-type: none">• File converter		Open the File Converter tool.**
<ul style="list-style-type: none">• Help		
<ul style="list-style-type: none">• Liquid Instruments website		Access the Liquid Instruments website.
<ul style="list-style-type: none">• Shortcuts list	Ctrl/Cmd+H	Show the Moku:Go app shortcuts list.
<ul style="list-style-type: none">• Manual	F1	Access the instrument manual.

* Power supply is available on Moku:Go M1 and M2 models. Detailed information about power supply can be found in Moku:Go power supply manual.



Output Configuration

Enable / Disable Outputs




Output channel is disabled, click to enable.



Output channel is enabled, click to disable.

Waveform types

Each channel can be set to generate one of six predefined waveforms.

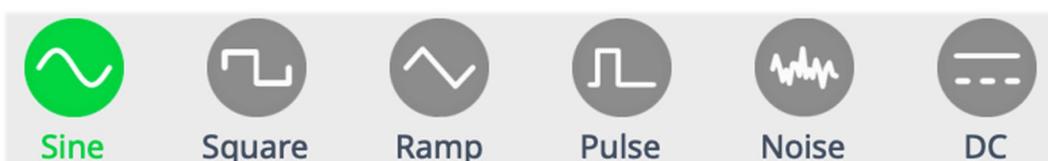

Sine Wave




ID	Description	ID	Description
1	Amplitude (High Level)	3	Offset (Low Level)
2	Signal Frequency (Period)	4	Phase

Click pill 1 - 4 to select and change values. The selected parameter is shown in, and can be edited from, the bar below. Alternative representations (shown in parentheses) can be selected by clicking the button.



Square Wave

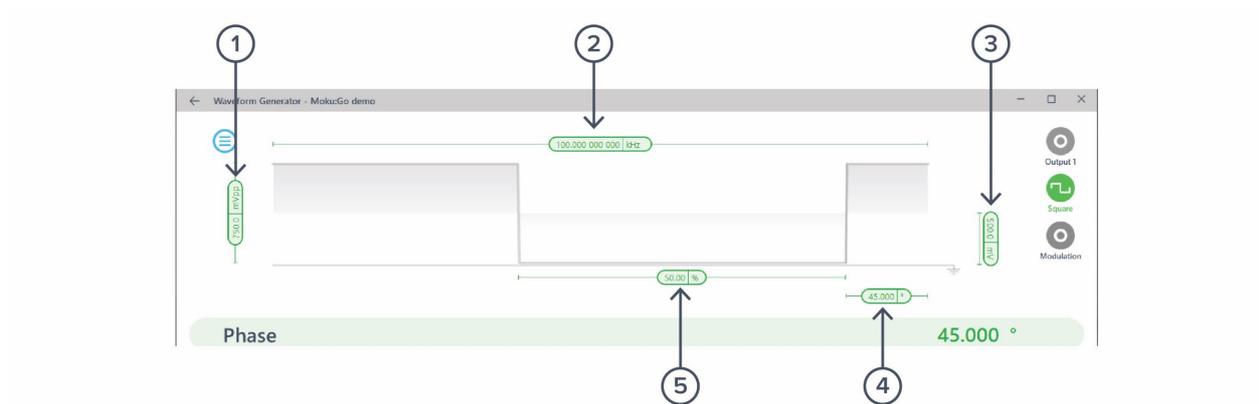


ID	Description	ID	Description
1	Amplitude (High Level)	4	Phase
2	Signal Frequency (Period)	5	Duty Cycle*
3	Offset (Low Level)		

Click pill **1 - 5** to select and change values. The selected parameter is shown in, and can be edited from, the bar below. Alternative representations (shown in parentheses) can be selected by clicking the button.

*Above 2.5 MHz, the duty cycle range is limited between 32% to 68%.

Ramp Wave

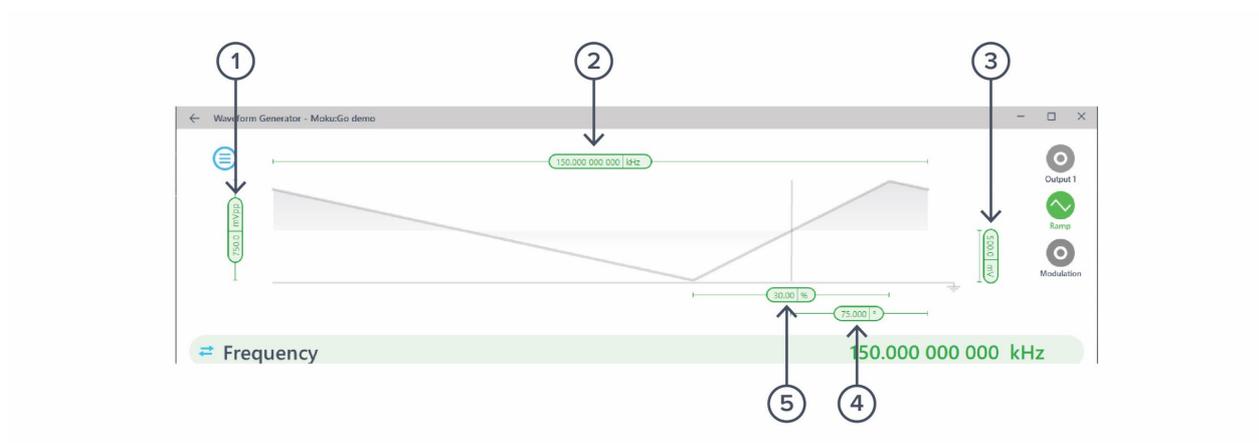


ID	Description	ID	Description
1	Amplitude (High Level)	4	Phase
2	Signal Frequency (Period)	5	Symmetry
3	Offset (Low Level)		

Click pill **1 - 5** to select and change values. The selected parameter is shown in, and can be edited from, the bar below. Alternative representations (shown in parentheses) can be selected by clicking the button.



Pulse Wave

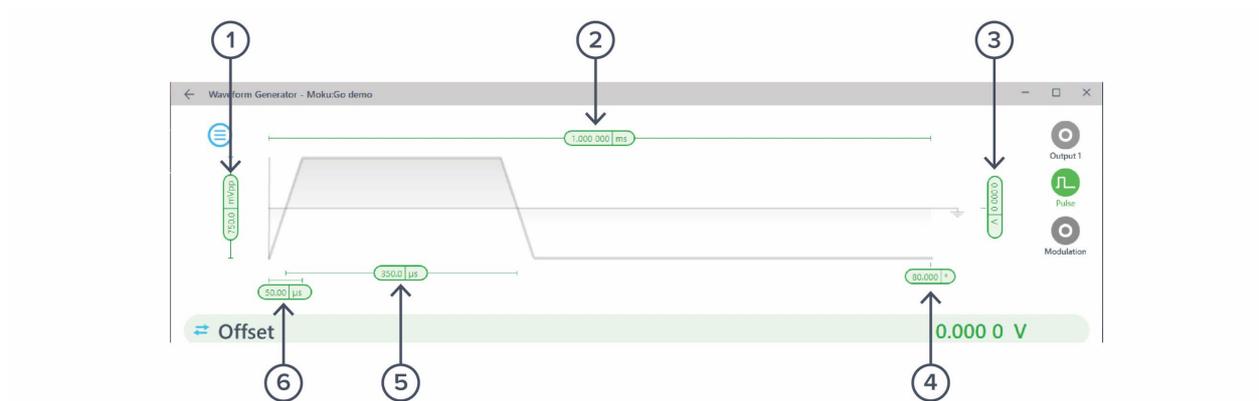

ID	Description	ID	Description
1	Amplitude (High Level)	4	Phase
2	Signal Frequency (Period)	5	Pulse Width
3	Offset (Low Level)	6	Edge time

Click pill **1 - 6** to select and change values. The selected parameter is shown in, and can be edited from, the bar below. Alternative representations (shown in parentheses) can be selected by clicking the button.

Noise




ID	Description	ID	Description
1	Amplitude (High Level)	2	Offset (Low Level)

Click pill **1, 2** to select and change values. The selected parameter is shown in, and can be edited from, the bar below. Alternative representations (shown in parentheses) can be selected by clicking the button.



DC wave

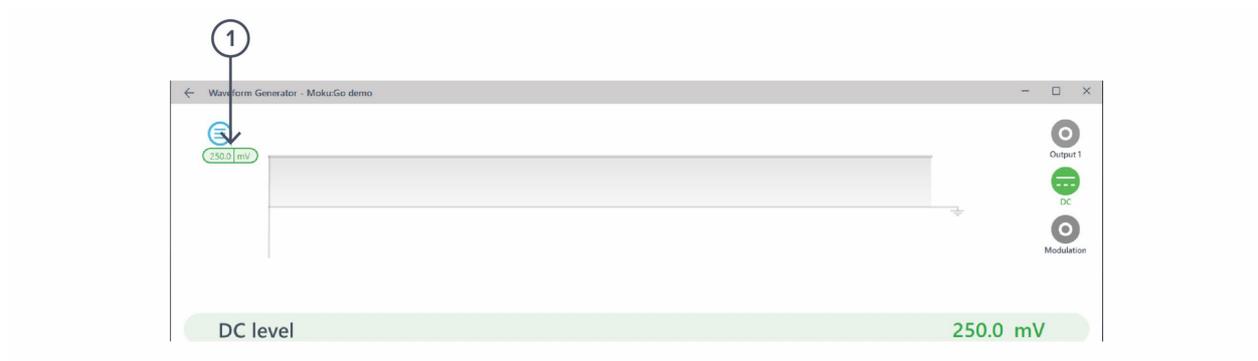

ID Description

1 DC level


Click pill **1** to select and change the DC level value.



Modulation types

The Moku:Go Waveform Generator supports several modulation and triggering modes. The modulation types available vary between waveforms: Pulse Width Modulation (PWM) only applies to the Pulse waveform type, while Noise only supports Amplitude Modulation (AM) and reduced triggering functionality. All other waveform types support Amplitude, Frequency, or Phase modulation as well as all available trigger options.


Amplitude modulation

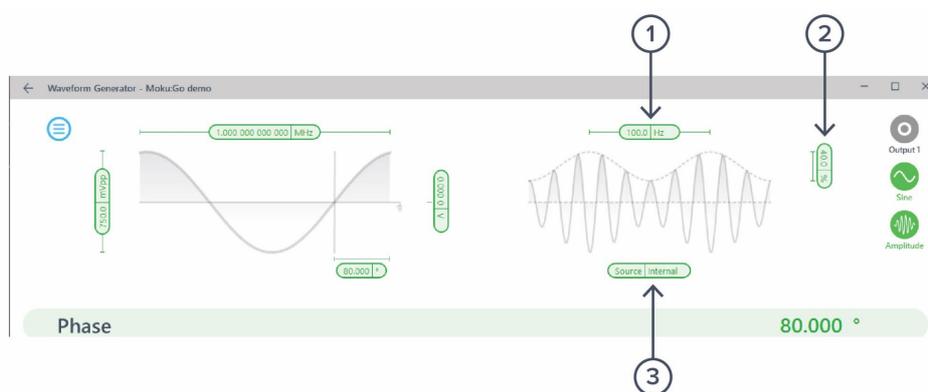

ID	Parameter	Description
1	Frequency	Only for the “Internal” modulation source. The frequency of the sine wave being used for modulation.
2	AM Depth	Fractional depth of modulation. 100% depth will reduce the signal amplitude to zero for a full-range negative modulation signal and double it for a full-range positive one.
3	Modulation Source	The modulation source can be an internally generated sinewave, Moku:Go input, or the other Waveform Generator channel. When using a Moku:Go input, you can further select the input range and coupling.




Frequency modulation

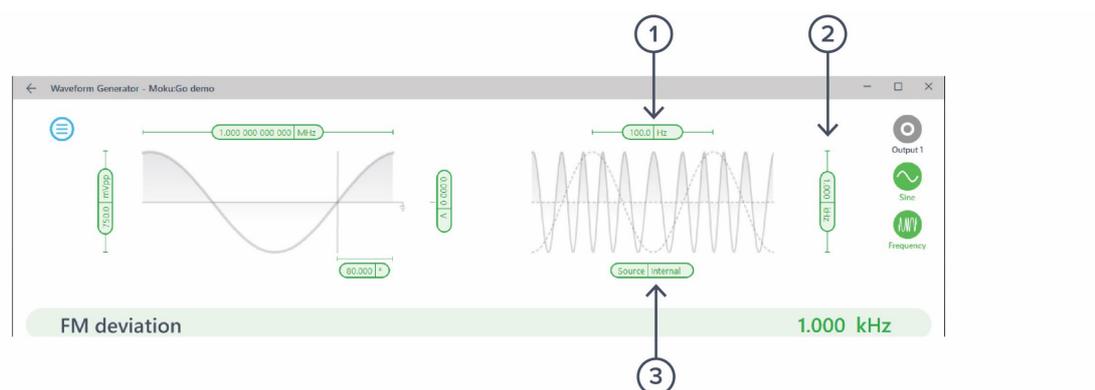

ID	Parameter	Description
1	Frequency	Only for “Internal” modulation source. The frequency of the sine wave being used for modulation.
2	FM Deviation	Full-range frequency deviation. A full-range input signal will vary the output frequency by this amount.
3	Modulation Source	The modulation source can be an internally generated sinewave, Moku:Go input, or the other Waveform Generator channel. When using a Moku:Go input, you can further select the input range and coupling.


Phase modulation

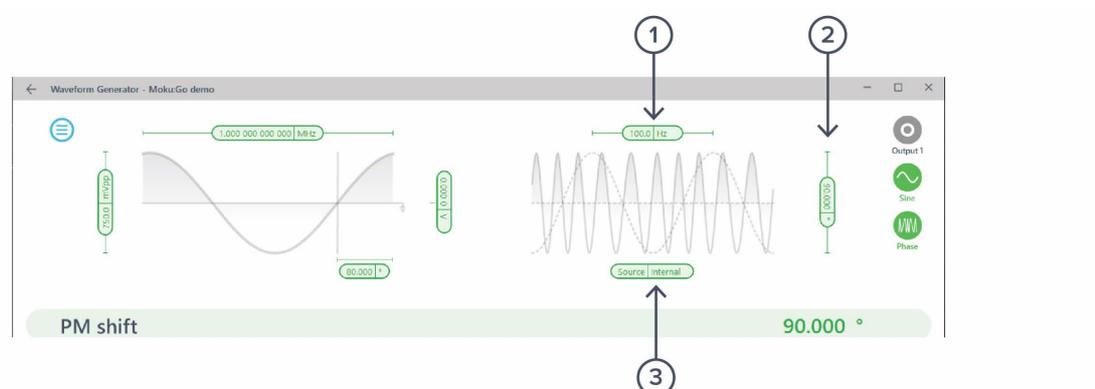

ID	Parameter	Description
1	Frequency	Only for “Internal” modulation source. The frequency of the sine wave being used for modulation.
2	Depth	Full-range phase deviation. A full-range input signal will vary the output phase by this amount.
3	Modulation Source	The modulation source can be an internally generated sinewave, Moku:Go input, or the other Waveform Generator channel. When using a Moku:Go input, you can further select the input range and coupling.



Pulse Width modulation

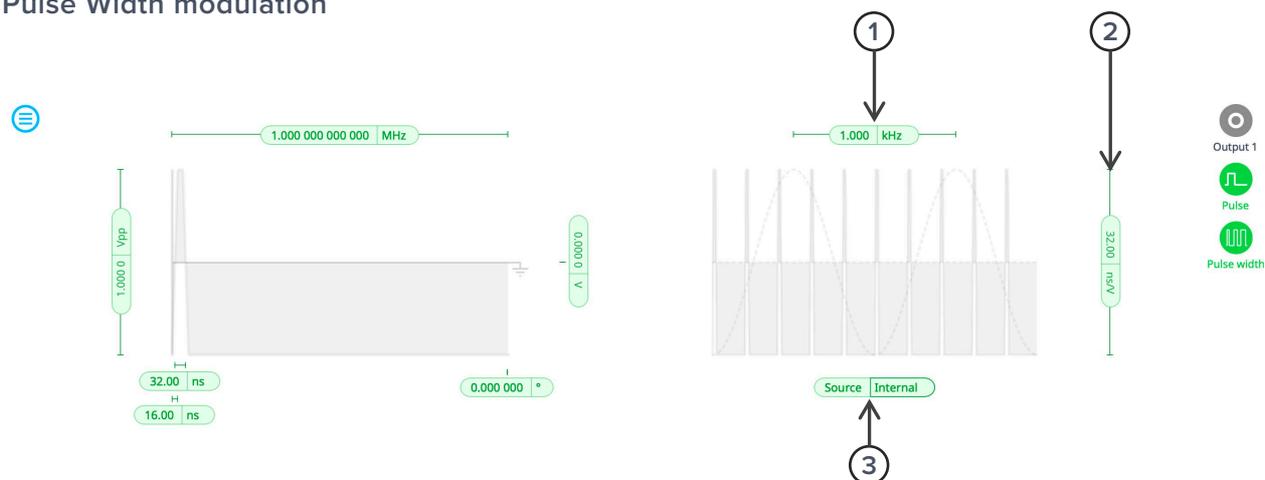


ID	Parameter	Description
1	Frequency	Only for “Internal” modulation source. The frequency of the sine wave being used for modulation.
2	Depth	Full-range pulse width deviation. A full-range input signal will vary the output width by this amount.
3	Modulation Source	The modulation source can be an internally generated sinewave, Moku:Go input, or the other Waveform Generator channel. When using a Moku:Go input, you can further select the input range and coupling.



Triggered modulation modes

Sine, Square, Ramp, Pulse, and Noise waves can be triggered from an internal or external source. The behavior upon receipt of the trigger signal varies according to the trigger mode.


Burst

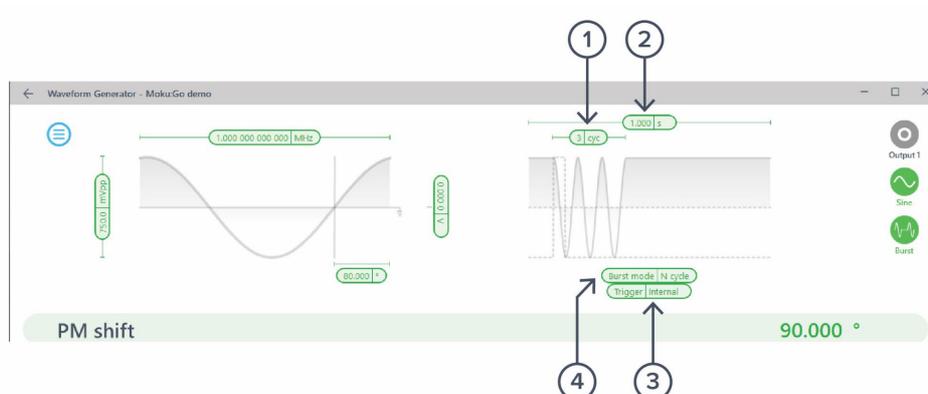

ID	Parameter	Description
1	Cycle count/period	N Cycle and Gated mode only. The number of cycles or time to output the waveform before re-arming.
2	Burst period	Internal trigger source only. Total period for the burst.
3	Trigger source	One of: Internal: Trigger automatically at the defined rate. Input: Trigger from associated input channel, at given voltage. You can further select input range and coupling. Output: Trigger from the other output channel, at given voltage.
4	Mode	One of: Gated: Continue to generate the output signal while ever the trigger event is asserted (level-triggered). Start: Begin generation of the waveform on trigger, continue indefinitely. N Cycle: Upon receipt of trigger signal, generate these many cycles of the waveform then re-arm. Not supported for Noise waveform.



Sweep

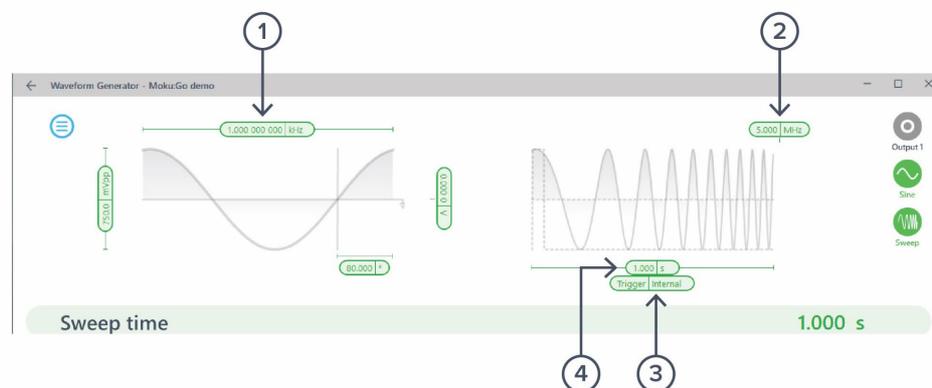

Sweep modulation acts like frequency modulation with a sawtooth, where the sawtooth starts on the trigger event.

Sweep modulation is not supported for the Noise waveform as it has no defined frequency.


ID	Parameter	Description
1	Start Frequency	Waveform frequency at the trigger event (sweep start).
2	End Frequency	Waveform frequency at the sweep end.
3	Trigger Source	One of: Internal: Repeat the sweep indefinitely on the defined period. Input: Trigger from associated input channel, at given voltage. You can further select input range and coupling. Output: Trigger from opposite output channel, at given voltage.
4	Sweep Time	Time between sweep start and end (period).



Power Supply

The Moku:Go Power Supply is available on M1 and M2 models. M1 features a two-channel Power Supply, while M2 features a four-channel Power Supply. The Power Supply control window can be accessed in all instruments under the main menu.

Each Power Supply operates in two modes: **constant voltage (CV)** or **constant current (CC)** mode. For each channel, you can set a current and voltage limit for the output. Once a load is connected, the Power Supply operates either at the set current or set voltage, whichever comes first. If the Power Supply is voltage limited, it operates in the CV mode. If the Power Supply is current limited, it operates in the CC mode.

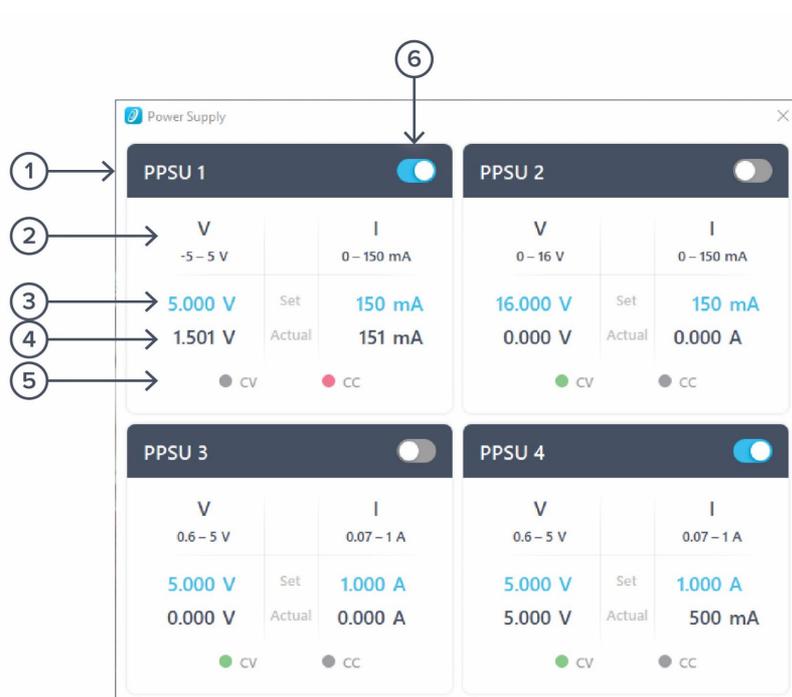

ID	Function	Description
1	Channel name	Identifies the Power Supply being controlled.
2	Channel range	Indicates the voltage/current range of the channel.
3	Set value	Click the blue numbers to set the voltage and current limit.
4	Readback numbers	Voltage and current readback from the Power Supply; the actual voltage and current being supplied to the external load.
5	Mode indicator	Indicates if the Power Supply is in CV (green) or CC (red) mode.
6	On/Off toggle	Click to turn the Power Supply on and off.



Instrument Reference

Waveform Types

The Moku:Go Waveform Generator is capable of generating six different signals, each with optional modulation.

Sine Wave

The Sine wave is the simplest dynamic signal in the Moku:Go. It features extremely low harmonic distortion; it's very close to a pure single frequency.

The Sine wave can be modulated by all available modulation types except PWM. Moreover, it forms the basis of the “Internal” selectable modulation source, providing a modulating waveform regardless of whether either channel of the Moku is currently generating a Sine wave.

Square Wave

The Square wave is a low-jitter waveform with a variable duty cycle and high slew rates. If you require slew-rate limits or variable duty cycle in your application, see Pulse Wave below.

Ramp Wave

The Ramp wave consists of linear ramps from low level to high and back again. The ratio between the time spent rising and the overall period is referred to as the symmetry. If you require configurable dwell times at the high or low levels but common rise and fall times, you can use the Pulse Wave with large edge times.

Pulse Wave

The Pulse wave is like the Square wave but has configurable edge times (rise and fall time). The trade-off is that at high frequency, Pulse has slightly worse edge jitter behavior compared to the Square wave.

The Pulse wave also uniquely supports Pulse Width modulation (PWM). When PWM is enabled, edge times are fixed to their minimum values.

Noise

Approximately Gaussian, white noise.

DC

Provides a high precision, fixed reference voltage at the output.



Waveform Parameters

Amplitude

Applicable To: Sine, Square, Ramp, Pulse, Noise

Amplitude is specified as a Peak-to-Peak value; that is, the high level minus the low level. If you wish to specify the high and low levels explicitly, tap the Amplitude pill then the Toggle Arrows in the parameter bar; or just tap the Amplitude label in the Settings Drawer to toggle between the two representations.

Frequency

Applicable To: Sine, Square, Ramp, Pulse

Specified in hertz. Can also be represented as period in seconds by tapping the Frequency label in the Settings Drawer, or the Toggle Arrows in the parameter bar.

Offset

Applicable To: Sine, Square, Ramp, Pulse

Average value of the Sine wave over time. The alternative representation of this parameter is Low Level, which combined with High Level also specifies Amplitude.

Phase

Applicable To: Sine, Square, Ramp, Pulse

Defines the phase of the waveform with respect to the internal reference clock of the Moku:Go device. By tapping the “Sync Phase” button in the right-click menu, this phase also becomes relative to the other output channel.

Symmetry

Applicable To: Ramp

Ratio, in percent, between the time spent on the rising edge and the overall period. As symmetry approaches 0% or 100%, the ramp wave becomes a sawtooth (minimum rise and fall times, respectively).

Pulse Width

Applicable To: Pulse

Positive width of the pulse. Any specified Edge Time is split equally between the Pulse Width and the rest of the cycle; that is, duty cycle is preserved when altering Edge Time.

Edge Time

Applicable To: Pulse

Time taken to transition from low level to high and vice-versa. This limits the slew rate of the signal, which can be advantageous in some applications. Edge Time is split between high and low time equally, preserving duty cycle. Edge Time cannot be adjusted when the Pulse wave is pulse-width modulated (PWM).



Duty Cycle

Applicable To: Square

The percentage of one period that the signal is active, or non-zero. This is similar to pulse width except that the edge time is not factored into the duty cycle due to the fast rise and fall times.

DC Level

Applicable To: DC

Fixed voltage to output.

Modulation Types and Trigger Modes

Modulation Sources

Each modulation type can be driven by one of three sources.

Internal

Modulation is driven by an internally generated sine wave of configurable frequency. The amplitude of this wave is “full range,” in that it will modulate to the depth specified when configuring the modulation type.

Input

Modulation for a given channel is driven by an analog input. The depth is specified per volt on the input. When this source is selected, the range and coupling of the corresponding input can also be selected.

Output

Modulation for a given channel is driven by the opposite output channel (i.e., Output 1 is modulated by the waveform on Output 2 or vice-versa). This allows you to doubly-modulate a signal by modulating a signal on one channel, then using that signal to modulate the opposite channel. This is useful, for example, when you wish to generate an “ideal” modulated signal on one channel, but then perturb the phase, frequency, or amplitude in order to test a system’s response.

Trigger Sources

Burst and Sweep modes change waveform parameters or behavior upon the detection of a trigger event. There are three possible sources for this event.

Internal

The trigger event is generated automatically at a given rate (specified period).

Input

The corresponding analog input is monitored for a rising edge past the specified voltage.

Output

The opposite analog output is monitored for a rising edge past the specified voltage. Combined with the fact that the opposite output can in turn be modulated from a variety of sources, this



provides extremely flexible control of the trigger period (including changing period based on an external voltage).

Amplitude Modulation

Applicable To: Sine, Square, Ramp, Pulse, Noise

Amplitude modulation will change the amplitude of the generated signal proportionally to the modulation input. The actual proportion changed is called the modulation depth, the units of which depend on the modulation source (see discussion of sources above).

Frequency Modulation

Applicable To: Sine, Square, Ramp, Pulse

Frequency modulation will change the frequency of the generated signal proportionally to the modulation input. The change in frequency caused by a given input is called the modulation depth and has units of hertz or hertz per volt depending on the modulation source used.

Phase Modulation

Applicable To: Sine, Square, Ramp, Pulse

Phase modulation will change the phase of the generated signal proportionally to the modulation input. The change in frequency caused by a given input is called the modulation depth and has units of degrees or degrees per volt depending on the modulation source used.

Pulse Width Modulation

Applicable To: Pulse

Pulse Width Modulation (PWM) changes the width of the positive pulse in the Pulse wave. If the modulation depth is set appropriately then this can produce traditional 0-100% duty cycle PWM, but it can also be used to produce pulse trains suitable for driving servo motors, electronic speed controllers (ESCs), etc.

Burst Mode

Applicable To: Sine, Square, Ramp, Pulse, Noise

In burst mode, a trigger event causes the given output to begin generating its configured waveform. Burst requires you to specify a sub-mode that defines if or when the generation ends.

N-Cycle: The waveform will stop being generated after the specified number of cycles, at which time it will re-arm and become ready to receive a new trigger. Not available for Noise, which is a continuous waveform and doesn't have a concept of a "cycle".

Gated: The waveform will continue to be generated while the trigger signal is high (level-triggered).

Start: The waveform generation begins on a trigger signal but will continue indefinitely.

Sweep Mode

Applicable To: Sine, Square, Ramp, Pulse

Sweep mode provides a frequency modulation of the input waveform, where the modulation waveform is a ramp wave that begins generation on the detection of a trigger signal. That is, when



a trigger is detected, waveform generation will begin at the start frequency and sweep (or “chirp”) to the end frequency over a given duration.

Sweep mode has three configurable parameters:

Start Frequency: Initial frequency of the output waveform, immediately on detection of a trigger. The Start frequency is the frequency of the unmodulated wave.

End Frequency: Final frequency of the output waveform, reached *duration* sections after the trigger has been detected.

Duration: The time taken to sweep from Start to End frequency. Upon completion of the sweep, the sweep circuit will re-arm and be ready to receive a new trigger input.



Ensure Moku:Go is fully updated. For the latest information, visit:

liquidinstruments.com